

# andrew James

## Food Processor



Please read the manual fully before using the appliance and keep the manual safe for future reference.

# Contents Page

Safety instructions	Page 3
Appliance specific safety instructions	Page 4
Appliance components illustration	Page 5
Assembling the appliance	Page 6
Functions:	
Chopping	Page 6
Whisking	Page 7
Slicing and shredding	Page 7
Juicing	Page 8
Cleaning	Page 9
Disposal of the appliance	Page 10
UK and EU Guarantee	Page 11
Electrical information	Page 12
Contact details	Page 13

## **Safety instructions**

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

 
## **Appliance specific safety instructions**

- After using the appliance for more than 5 x 1 minute periods allow the appliance to cool for an hour.
- Clean all parts and accessories that come into contact with food before first time use.
- Never exceed the maximum quantities stated on the bowl.
- Do not pour liquids hotter than 30° C into the food processor.
- Never leave the appliance unattended while it is on.
- Never touch parts of the appliance whilst they are moving.
- Refrain from putting utensils or fingers inside the lid opening.
- Never press down ingredients into the lid opening with your hands.
- Do not use the appliance for hard ingredients such as frozen meats, cheese, bones etc.
- Always ensure the appliance is turned off before removing the lid and removing any attachments.
- Always remove the blade first before removing the ingredients from the bowl.
- Demonstrate care when you are handling, fitting, cleaning or removing the blades from the food processor.
- Switch off the appliance and remove all accessories before cleaning.
- It is recommended to only run the appliance for a one minute period, always allow the appliance to cool for 5 minutes before reusing it.

### **Please note:**

Refer to “ingredients list” page 9 for sizes and times of foods.

## Appliance components illustration

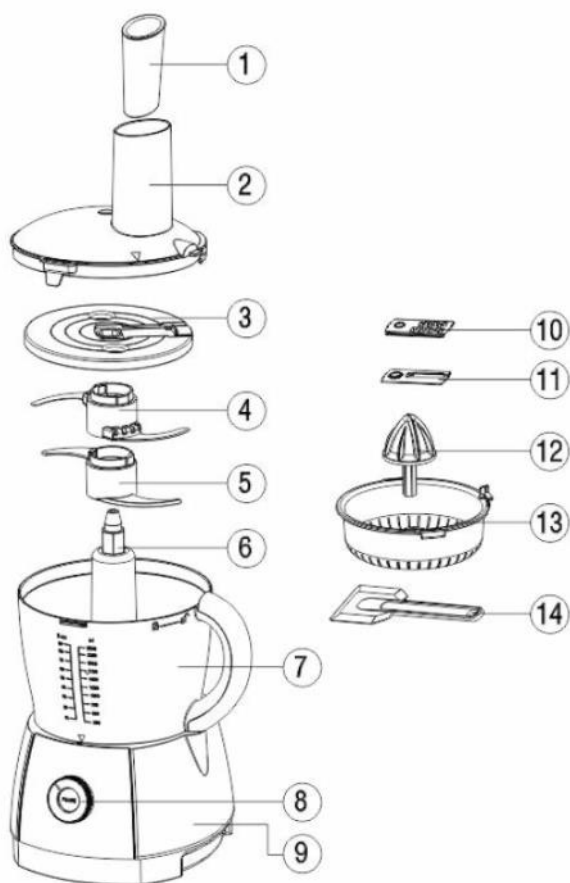

1. Plunger	8. Switch plate
2. Bowl cover	9. Power unit
3. Blade cover	10. Shredding blade
4. Chopping blade	11. Slicing blade
5. Mixing blade	12. Juice drill
6. Blade support	13. Filtrating Plate
7. Bowl	14. Spatula

## Assembling the appliance

 
1. Place the appliance so that the switch plate (8) on the power unit is facing directly towards yourself.
2. Attach the bowl (7) to the power unit (9) so that the handle faces in the 2 o'clock position (the bowl should fit into the slots of the power unit).
3. Rotate the handle of the bowl (7) clockwise until it is in the 3 o'clock position. It is firmly locked in place once a "clicking" sound can be heard.
4. Fit the bowl cover lid (2) on top of the bowl aligning it with the locking system in the 2 o'clock position.
5. As previously done in step 3, rotate the unit until it is at the 3 o'clock position and locks into place.
6. Turn the switch plate (8) to on. If the machine does not work this is frequently down to incorrect assembly. Please start the process over again.

## Functions

### Chopping

1. Follow steps 1 to 3 as described in "Assembling the appliance".
2. Place the blade support (6) into the centre of the bowl (7) ensuring that it is securely fitted (if it can rotate freely then it is not securely fitted).
3. Fit the chopping blade (4) onto the blade support (6), it should rest at the bottom of the blade support.
4. Place the ingredients you wish the chop into the bowl (7).
5. Follow steps 4 and 5 "in assembling the appliance" to complete the assembly.

Please note: The pulse speed setting is only to be used for short intermittent bursts for chopping and processing at maximum speed.

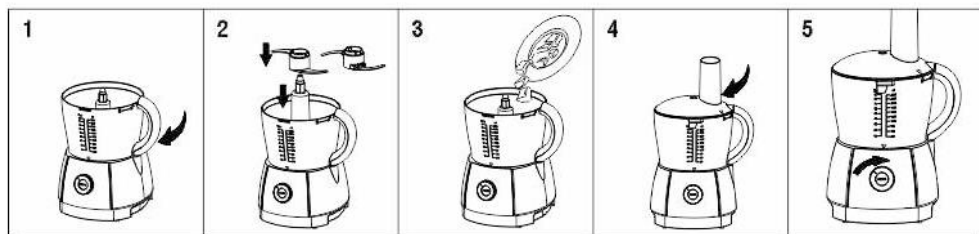


## Whisking function

- Follow the steps in “chopping” function replacing the chopping blade (4) with the mixing blade (5). This function can be used to mix and whisk together such ingredients as eggs and flour.


## Slicing and shredding function

 - Follow steps 1-3 as described in assembling the appliance.
- Place the blade support (6) into the bowl (7) ensuring it is correctly fitted.
- Insert either the shredding blade (10) or slicing blade (11) into the blade cover (3).
- Attach the blade cover (3) to the blade support (6) ensuring it is securely fixed (it should not rotate).
- Follow steps 4 and 5 in “Assembling the appliance”.
- Turn the appliance on and select a low speed setting and increase gradually.
- Slowly and carefully push the food into the opening of the bowl cover as illustrated in diagram 8.
- If the food is small or is difficult to push down the chute in the bowl cover, please use the plunger provided (1).
- When the process is finished turn the speed setting down to “0” before emptying the appliance of ingredients.

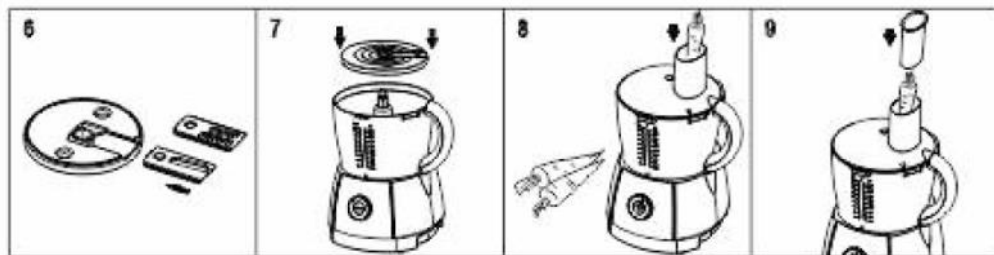

## Juicing function

 1. Follow steps 1 to 3 as described in “Assembling the appliance”.
2. Place the filtrating plate (13) into the bowl (7) rotating it until it fits correctly into the slots. This is confirmed by a clicking sound.
3. Place the juicer drill (12) into the filtrating plate (13) as illustrated in diagram (10).
4. Plug the appliance electrical cord into the wall socket and rotate the switch to level 1 or 2.
5. For example place an orange cut in half fruit side down onto the juice drill (13) to extract the juice.
6. Turn the appliance off, unplug the cord from the electrical socket and pour out the juice.

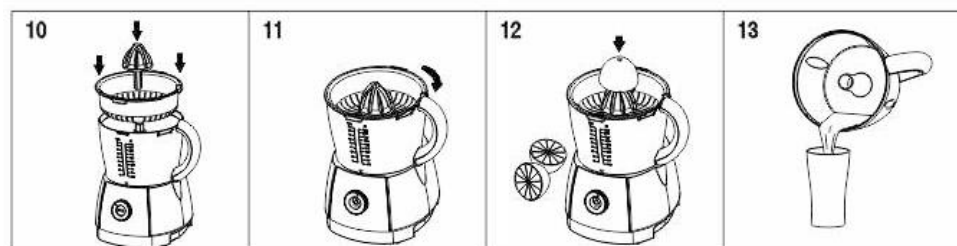



## Ingredients list

### Reference for processing size and time

Function	Ingredient	Maximum quantities	Max mins Slicing/ shredding
Slicing	Potato	500g	60s
And	Melon	500g	60s
Shredding	Carrot	500g	60s
Chopping & Whisking	Meat	500g (10g per piece)	50s
	Ham	400g (15g per piece)	50s
	Onions	500g (20g per piece)	50s
	Egg	Ten yolks	40s
	Strawberry	300g	45s
	Cheese	200g	40s
	Almonds	200g	40s
	Hazelnuts	200g	40s
	Walnuts	200g	40s

### Cleaning

- Always unplug the processor from the power outlet before cleaning the appliance.
- Clean the power unit with a soft slightly damp cloth. Do not put it under running water and do not submerge it in water or any other liquids.
- All accessories can be washed by hand or in the dishwasher, for hand washing use tepid water and normal detergent. For dishwasher cleaning always place accessories in the upper part of the dishwasher making sure the water never exceeds a temperature of 30°C.
- Do not use chemical or abrasive washing up liquids.
- Store the appliance in a dry area, preferably in its original box.

## Disposal of the appliance

Please note that this Andrew James product is mark with this Symbol:

This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.



In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the E.U. can take used equipment to special recycling stations free of charge. In certain member states used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

## **UK and EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to [www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com). Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

 
The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

## Electrical Information

### Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live (Brown)** wire connects to the right- most live (L) terminal nearest to the fuse.
- The **Neutral (Blue)** wire connects to the left-most neutral (N) terminal.
- The **Earth (Green and Yellow)** wire connects to the central, top most earthed (E) terminal.

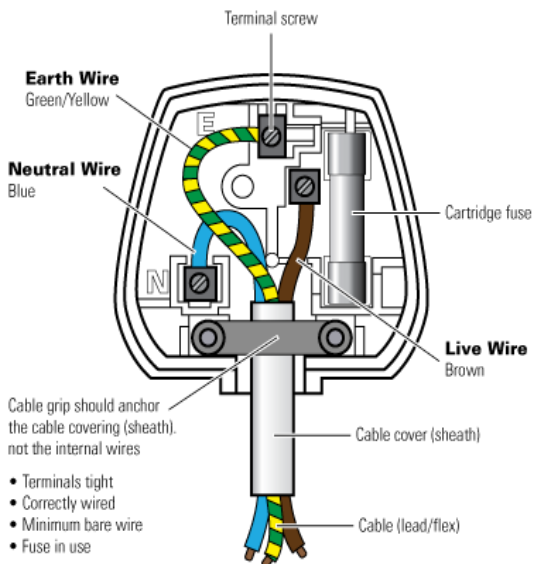

### Warning:

If the appliance is double insulated, indicated by the double insulated symbol:



it should not have an earth wire or earth connection.

### Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly

qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit <http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/>